

## IP Power 9258 Quick Installation

### 0. Before Getting Started

Before getting started, please check your IP Power 9258 package contents and your system meets the following requirements.

**Note:** With problems, please refer to User Manual from the provided CD for details.

Package Contents	Minimum System Requirements
<p><b>Your package ships with the following items:</b></p> <ul style="list-style-type: none"> <li>■ IP Power 9258 BOX                             <ul style="list-style-type: none"> <li><b>Maxi. rated voltage: 250V AC, 24V DC</b></li> <li><b>Maxi. rated currency: (Total) 15A AC/DC, ( Individual) 6A AC/DC.</b></li> </ul> </li> <li>■ CD- Manual - IP search tool</li> <li>■ Quick installation (QI)</li> <li>■ Option: Power cable</li> </ul> <p>* For <b>220-250V</b>, use <b>power wire at 10A current..</b> Max output current: (total) 10A.</p> <p>* For <b>100-120V</b>, use <b>power wire at 15A current..</b> Max output current: (total) 15A.</p>	<ul style="list-style-type: none"> <li>■ ≥ 300MHz Intel Pentium II and above Windows 98/ SE/ 2000/ ME /XP –IE , Netscape .</li> <li>■ ≥ 64MB memory</li> <li>■ VGA Card : support Hi-Colors and above and direct draw</li> <li>■ Internet card- with RJ-45 (CAT 5)</li> <li>■ Internet Hub</li> <li>■ Internet : one set of IP provided by your ISP EX: xxx.xxx.xxx.xxx</li> </ul>


### 1. Hardware Installation

#### IP Power 9258 Box Installation

Connect Power in cable and network cable (RJ45 ) to your HUB and connect the control device . Put attached CD in CD-ROM.

#### Connectors Illustration

The diagram below illustrates the typical connection of the IP Power 9258.

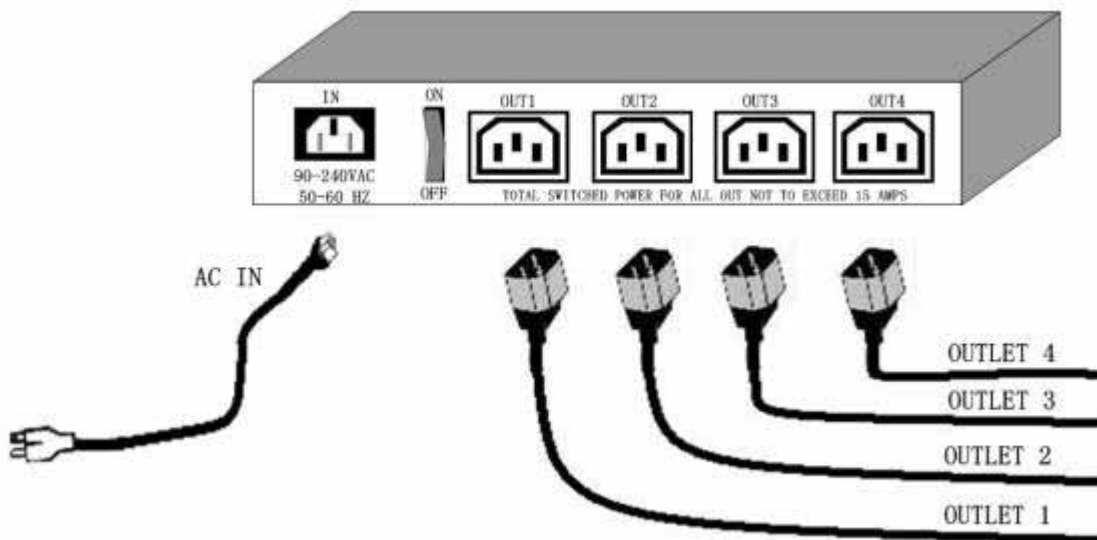

## 2. Software introduction

### IP Power 9258 Software information

Step 1 : Insert attached CD and the following wizard will AUTO jump.

There are 2 topic for 9258 : Manual and Driver

1. Manual: With 9258 Manual - please check as setting .
2. Driver : Include search dynamic IP address program : **ipeditv4.exe**, .

Step 2 : Please copy **ipedit.exe** in your HD, and execute **ipedit.exe** to find 9258 dynamic IP address easily. You can find IP address in this Ethernet , **ipedit.exe** will show the information for reference. Double click the IP address, you can get in the webpage. Please type in Username : admin and Password :12345678 and you can get in the 9258 webpage.

Pic Step1: Auto Run from the CD :



Pic 1 of Step 2: Segment **192.168.100.XXX**

Name	新版本測試			
Gateway	192	168	100	254
IP	192	168	100	54
Netmask	255	255	255	0
HTTP Port1	80			
HTTP Port2	8080			
MAC	00:92:00:00:00:3D			

- Note:** \*
- \* If can not get in the webpage through IP EDIT, please refer attached note to setup the network segment.
  - \* If can not get IP address from Ipedit , probably 9258 IP address "192.168.10.100" had been used in your Ethernet , please connect 9258 direct to your PC ( by RJ45 ) and change the 9258 IP by Ipedit .