



# E-P732-DIO Command Set Control Demo


1. Please use CVBrowser.exe to find Ethernet Digital I/O Converter.

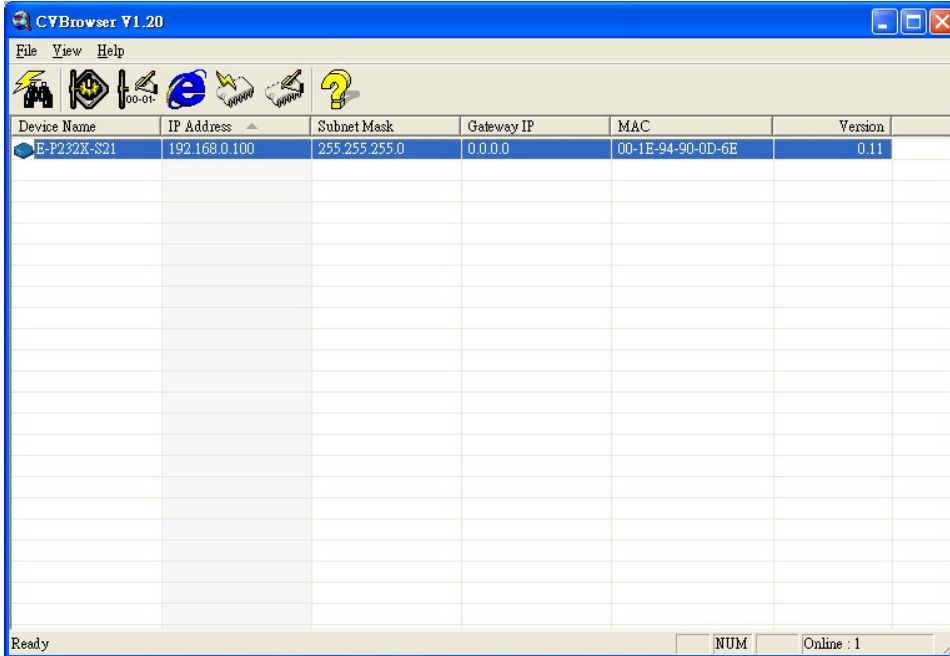


2. Please modify Converter IP ( Device Settings ) & use IE Browser Enter built-in Web Server ( Default IP : 192.168.0.100 )

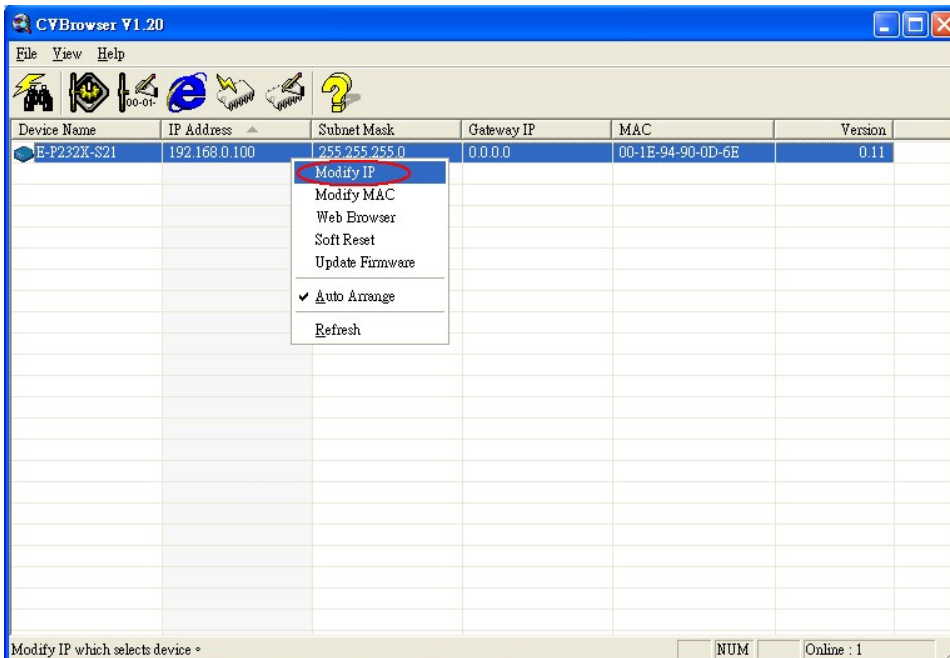

3. Ethernet Digital I/O Converter has built-in Web Server as shown below (<http://192.168.0.100>):

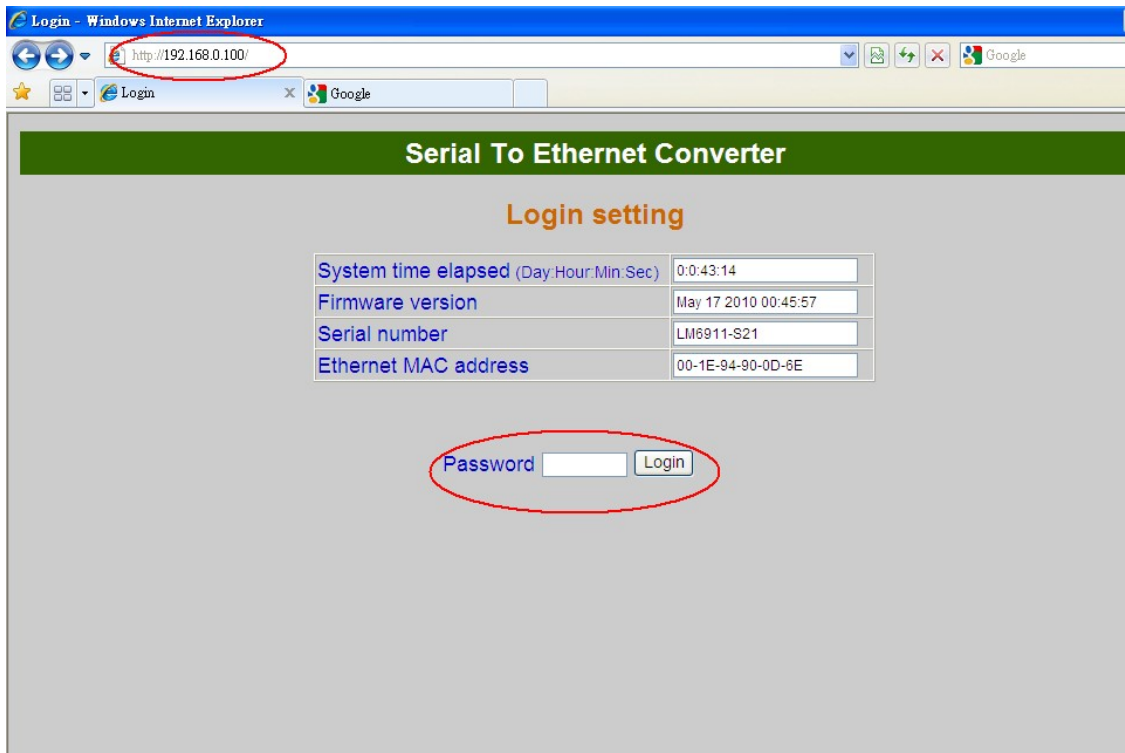

4. Please login (Password: blank), the parameter setting will be as shown below:

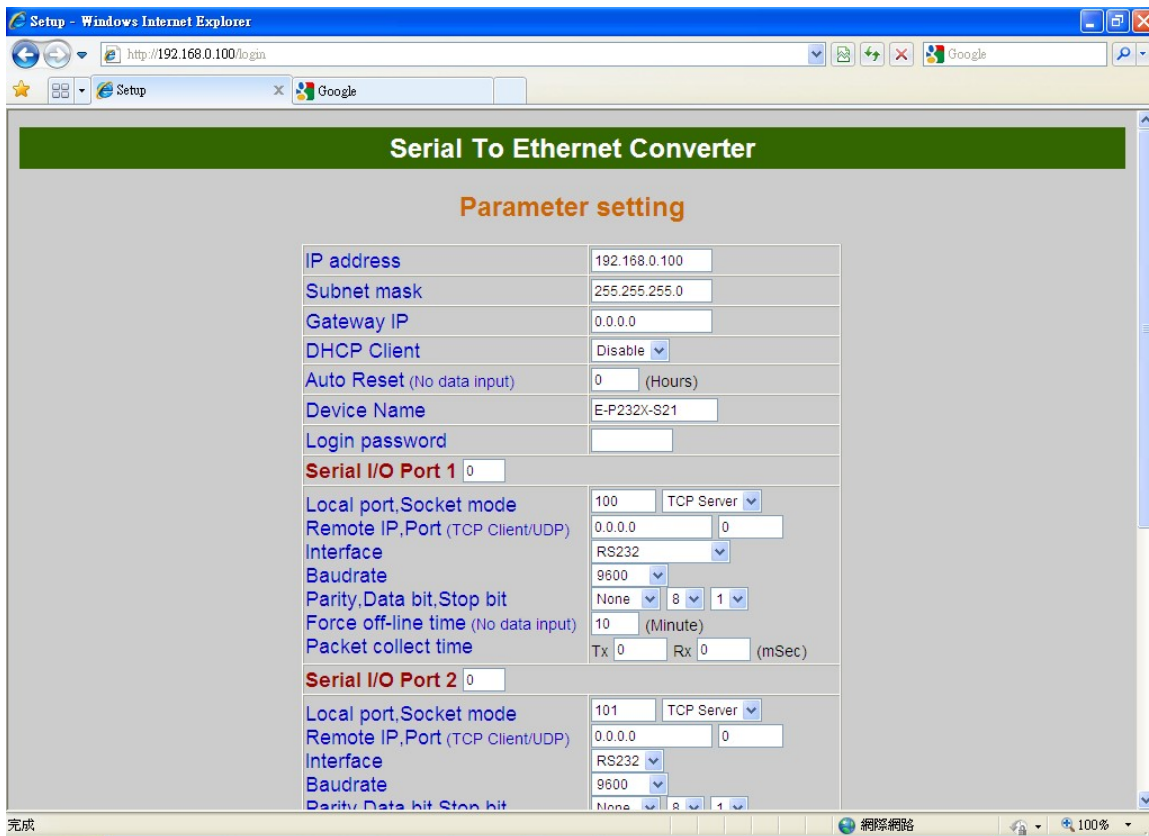

- Digital I/O port Setup: Please select Port No. and TCP mode.  
 Digital Input / Digital Output pin assignment & default value setup  
 Digital I/O Port1: set as Digital Output  
 Digital I/O Port2: set as Digital Input

<b>Digital I/O Port 1</b> 0	
Local port,Socket mode	102 TCP Server ▾
Remote IP,Port (TCP Client/UDP)	0.0.0.0 0
I/O Direction(1 ~ 8)	00000000 (0:Output, 1:Input)
I/O Data(1 ~ 8)	00000000
Record Last Status	Disable ▾
Force off-line time (No data input)	10 (1 ~ 255 Minute)
<b>Digital I/O Port 2</b> 0	
Local port,Socket mode	103 TCP Server ▾
Remote IP,Port (TCP Client/UDP)	0.0.0.0 0
I/O Direction(1 ~ 8)	11111111 (0:Output, 1:Input)
I/O Data(1 ~ 8)	00000000
Record Last Status	Disable ▾
Force off-line time (No data input)	10 (1 ~ 255 Minute)
<input type="button" value="Update"/>	

- Use Hyper-Terminal to control DO & monitor DI status.

tcp-1 內容

連線到 設定

tcp-1 變更圖示(I)...

主機位址(H): 192.168.0.100

連接埠號碼(M): 103


連線方式(N): TCP/IP (Winsock) ▾

確定 取消

7. Digital I/O Port #2: set as Digital Input

Above point #6 set a to port number 103 (physical port #2)

Press Dial-up (撥號), Ethernet DI/O Converter will response Digital Input default status “11111111” to Host

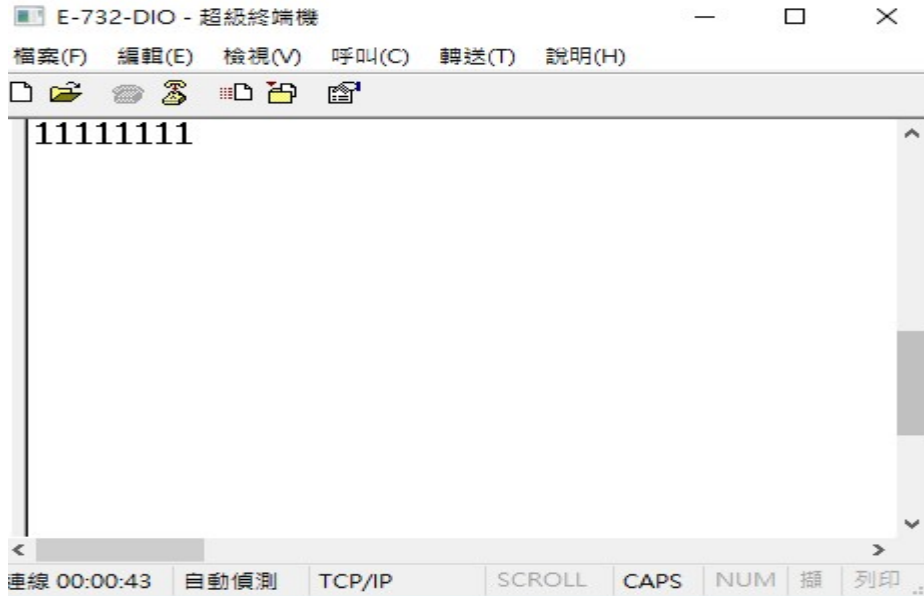


8. Digital I/O Port #2 set as Digital Input , it has 8 pins of Digital Input.

If you want to know Digital Input status anytime, you can Press “Enter” key.

Ethernet DI/O Converter will response Digital Input status to Host.

You can connect power output ( +/- ) to DI-1 ( P/N ) to try.


The Hyper-Terminal will return status of DI instantly.

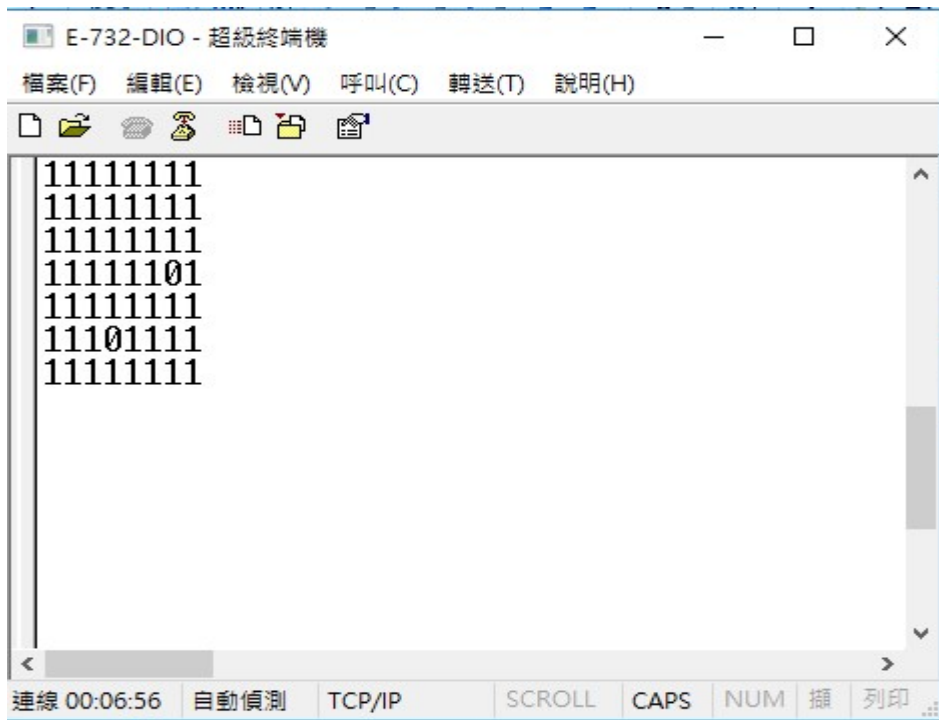

9. Digital I/O Port #1: set as Digital Output

Start a new link to port 102 as per description at point #6.

Press Dial-up (撥號), press “Enter” key ,Ethernet DI/O Converter will response Digital Output default status “00000000” to Host.

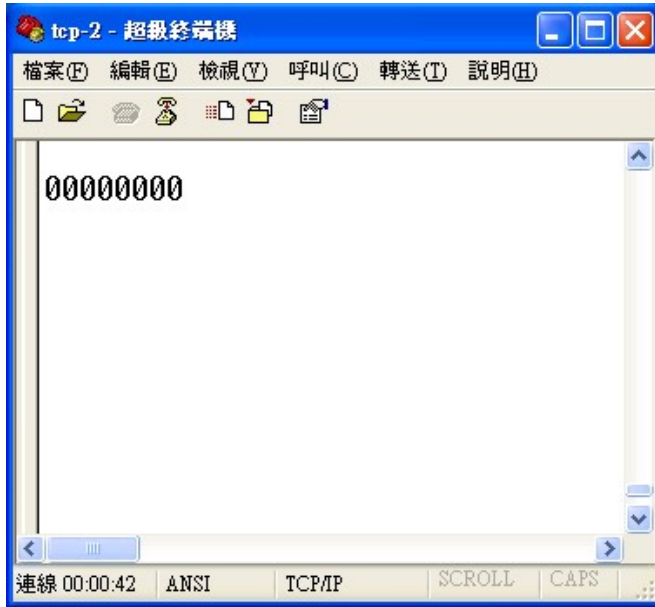

10. Digital I/O Port #1 set as Digital Output , it has 3 pins of Digital Output.

To test the Digital Output pins, it must be sent a string fulfill with 8 digits (1 byte) such as “11100000”. You will see the 3 pins of Output Relay all active.

